

# DIESEL AIR HEATERS MANUAL CONTROLLER

Camp more, sail more, stay warm



In **Power Control** the heater runs at a constant power level and will not cycle on and off and will remain in constant heat mode, this mode is a lot kinder on power usage. Press the button to turn on, red light will illuminate and the heater will start.

Regulate the heat output by rotating the power knob.

Turn off with same button.

In **Temperature control** the heater will cycle on and off to regulate the temperature with high current draws on stop and start, it will also blow hot / cold as it cycles.

**We do not recommend you use this mode as it is very hard on battery supply**

Fan mode is for fresh cold air only

Remove the knob to install the controller using the screw provided

If the red light is flashing it is in fault mode, count the number of slow flashes it will tell you what the problem is, refer to the manual for error codes.

## Heater Care

All diesel air heaters need to be run at a high power setting for around 15 min every 4 to 5 hours to prevent carbon build up. If this is not done and the heater fails due to carbon build up this is not covered by warranty.

## Heater Warranty

All air heaters sold by Dieselheat carry 24 months warranty from date of purchase. Warranty is return to base which means you are responsible for returning any defective heaters to us for repair.

If you have an issue every attempt will be made to fix it via phone or email. Warranty is on heaters only and does not cover any issues caused by installations performed by the customer or other parties. If we can't fix any issues with heater operation over the phone or email then the unit and possibly other parts as we suggest to you depending on the issue must be returned to us using an Australia Post air bag at your expense.

Generally we suggest running the heater on high for about 15min each time you turn it on as this is a convenient time to run it on high as it heats up your space.

On arrival at our premises we will set the unit up on our test bench to ascertain what problem has occurred. Any defects or issues with the heater will be fixed free of charge and the unit will be shipped back to you at our expense. If the unit operates without any problems it will be deemed an installation problem and this is not covered by warranty. Any costs involved in returning the unit to the customer is at your expense.

Please do not try to disassemble the heater yourself whilst it is still under warranty without consulting with Dieselheat.

At Dieselheat we care about our customers - if you have any concerns, questions or problems please contact us at [sales@dieselheat.com.au](mailto:sales@dieselheat.com.au) or on 0418 130 971 and we will help you out.



**dieselheat**

[www.dieselheat.com.au](http://www.dieselheat.com.au)  
0418 130 971  
[sales@dieselheat.com.au](mailto:sales@dieselheat.com.au)

39 Golden Valley Road  
Cygnet 7112 TAS

**CARAVAN RV DIESEL HEATING SPECIALISTS**