

# OPERATION GUIDE

## 3009 ADVANCED CONTROL PANEL | Oven 76D & 76D Gimbal

 
Please Refer to Manual for Full Operation and Maintenance Instructions at [wallas.com](http://wallas.com)

### BUTTONS & DIGITAL PANEL LEGEND



**Left Arrow**  
Move cursor  
left or up


**Right Arrow**  
Move cursor  
right or down

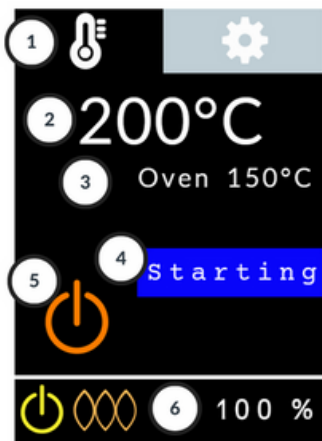

### LOCKING THE DOOR

(SAFETY FEATURE)

 The oven is equipped with an automatic lock that prevents the door from opening while the vehicle or boat is in motion.

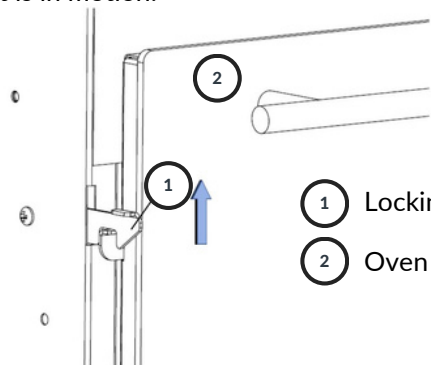

- 1 Locking hook
- 2 Oven door

The oven door is opened by lifting the locking hook upwards.

### Digital Panel Legend

- 1 Main Menu Bar  
Thermo Control Mode  
Settings  
Temp Sensor  
Device Info  
Device Stats  
Clear Lock  
Temp Unit (C°/F°)  
Connections  
Altitude
- 2 Oven target temperature
- 3 Oven temperature
- 4 Oven Status
- 5 Start/Stop Icon
- 6 Info Bar  
Power On/Off  
Combustion  
Info  
Lock  
Oven power %

➔  
SCAN FOR  
76D  
MANUAL



### IGNITION

To start, use the **Arrow Buttons** to move the orange selection square to the white **Start/Stop Icon** and press the **Select Button**. Confirm the selection by holding the **Select Button** down for 3 seconds (safety feature). White icon turns orange.

*Starting* will appear on the screen. The light orange combustion light will light up when the burner flame has been ignited and the combustion has stabilized (in about 5 min). Oven will be fully operational about 10 min later.



### TARGET TEMPERATURE SETTING

Use the **Arrow Buttons** (left or right) to move the orange selection square to the **Main Menu Bar**. Press **Select Button** to activate the **Main Menu Bar**. Use **Arrow Buttons** to choose the **Thermo Control Mode** and press the **Select Button** to select.

Use the **Arrow Buttons** to move the orange selection square to the **Target temperature** and press **Select Button** (picture 2).


Press **Arrow Buttons** to set the desired target temperature.




## SHUT DOWN

Quick shut down:  
Press and hold the **Select Button** down for more than 4 seconds.


*Stopping* will appear and the Power Icon light will change to white indicating the unit is off.

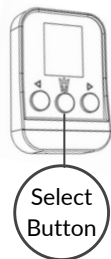


Alternatively use the **Arrow Buttons** to move the selection square to the **Start/Stop Icon** and press the **Select Button**.

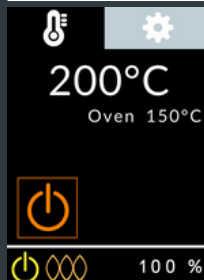

Press and hold the **Select Button** down for more than 2 seconds.

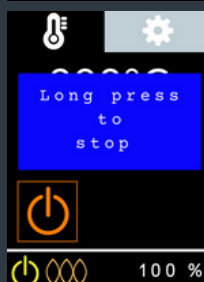

*Stopping* will appear and the Power Icon light will change to white indicating the unit is off.

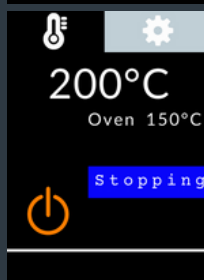

## SETTINGS

Get familiar with the control panel's functionality. Read more from User Manual.

Move the selection square to **Main Menu Bar** and press the **Select Button**. Use the **Arrow Buttons** to choose **Settings**. Press the **Select Button**.




Use the **Arrow Buttons** to move the selection square down and press the **Select Button** to choose.




The stove operation can be optimized to different altitudes.

Select the altitude from settings before starting the unit.

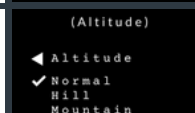


Device stats can be checked from settings  
Voltage  
Usage hours  
System starts  
Pump cycles  
Previous error code

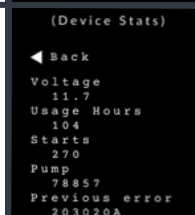


## LOCK

(SAFETY FEATURE)

 
If a **Lock Icon** is displayed, the device has locked itself for safety. The unit will also lock after 2 unsuccessful starts. Move the selection square to the **Exclamation Point Icon** and press the **Select Button**. An Error Page will appear.

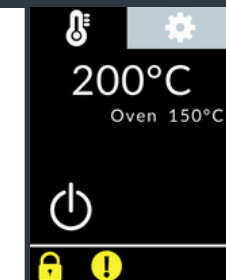

 If the device has locked itself, there may have been a failure that should be investigated and resolved prior to further use. The error page will display a check list and a website for further information. If you need help, reach out to a professional.

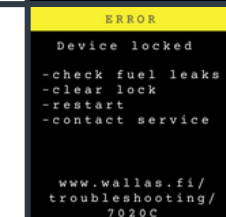

To remove the lock, press any button to return to the main display. Move the selection square to the **Main Menu Bar** and press the **Select Button**, choose **Settings**, and press the **Select Button**. Choose **Clear Lock** from the Settings Menu and press the **Select Button**.

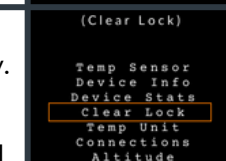

## USEFUL TIPS

When using baking paper in the oven, the unnecessary edges should be cut out, because those disturb the air circulation in the oven.

Do not use scratching cleaning sponges or scrubbing agents for cleaning.